## TT20 傳輸電腦新途徑

- 一. 客戶如有需傳輸請另購 TESA 047.61046 傳輸線 將 TT20 連接到電腦
  二. 點擊 TI開 Winwedge 軟件,如下圖界面:
  Software Wedge Setup (Untitled)
  File Mode Port Define Activate Help
- 四. 點擊 Mode 下拉列表選 Send Keystrokes To...,再在下圖中設置你想將 數據傳輸到電腦的格式,可以為 Notepad(預設)、Excel、Word(需將 Command Line 相應改為 Excel、Word)

🔲 Software Wedge Setup (Untitled)	- 🗆 🗙
<u>File Mode</u> Port Define <u>Activate</u> Help	
✓ Send Keystrokes To DDE Server	
Software Wedge Setup (Untitled)	- 🗆 ×
Lne Woge four Deine Wogas Helb	
Application Fitle Bar Text Notepad	]
Command Line Notepad.exe	Cancel
In "Send Keystrokes" mode, WinWedge conve keystrokes and sends these keystrokes to anot	erts incoming serial data to her application program.
The "Application Title Bar Text" and "Comman specify the application that is to receive all keys	d Line" allow you to strokes from WinWedge.
Leave both items blank to have WinWedge ser	ad koustrakas ta whatavar

EXECL Command Line EXCEL .exe "Send Keystrokes" mode, WinWedge converts	OK Cancel
Command Line EXCEL .exe "Send Keystrokes" mode, WinWedge converts	Cancel
	ncoming serial d
ystrokes and sends these keystrokes to another re "Application Title Bar Text" and "Command Li ecify the application that is to receive all keystrol	application prog ie'' allow you to es from WinWe

五. 點擊 Port 打開下拉菜單,點選打開 Setting...進行參數設置如下圖:

=	Softwa	ce We	dge Set	ap (Untit	led)	- 🗆 ×
File	<u>M</u> ode	Port	Define	Activate	<u>H</u> elp	
		Se	ttings			
		<u>A</u> r	nalyze			
		Be	ep On Ir	iput		

六. 打開 Define 菜單,點擊打開 Input Data Record Structure...

Software Wedge	Serial Port S	ettings	×
<u>C</u> onnector	<u>B</u> aud Ra	te	
COM1 A	C 110	○ 2400	ок
COM3 COM4	○ 300	<b>€ 4800</b>	
COM5 COM6	C 600	C 9600	Cancel
	C 1200	C 19200	
- <u>P</u> arity	_ <u>D</u> ata Bits	<u>S</u> top Bits	Elow Control
C None	C Five	01	( None
C Odd	C Six	C 1.5	C Xon/Xoff
• Even			C Hardware
C Mark	• Seven	(° Z	C Opto-RS
C Space	C Eight	Buffer S	Size: 512

	Softwa	re We	dge Set	ap (Ontit	led)	- 🗆 ×
File	<u>M</u> ode	<u>P</u> ort	Define	<u>A</u> ctivate	<u>H</u> elp	
			Inpu	t Data <u>R</u> ec	ord Structure	
			<u>T</u> ran	slation Tab	le	
			Seria	l Qutput S	trings	

Please select the e the end of each ser	vent that will signal ial input data record
Carriage Return	or CrLf Received
C Time Delay Bet	ween Records
C Fixed number of	Bytes Received

在上圖中選第一項,數據傳輸到文檔後將不會自動換行(格);選第二項可以 自動換行.

七. 點 Continue 會出現下圖,一般可以不填點擊 OK 就可以了;

Record Preamble Keystro	kes OK
	Cancel
	<u>K</u> eystroke List
<u>Field</u> <u>Filter</u>	Field Postamble Keystrokes

八. 下拉 Activate 菜單,選 TEST MODE 進行測試,選 Normal Mode 後,量測時數 據就可以同步傳輸到電腦相應文檔了!



此軟體功能還未能全部清楚,以上操作說明僅供參考~