


BLAKE MANUFACTURING COMPANY

Manufacturers of the
BLAKE CO-AX INDICATOR

15310 Proctor Ave.
City of Industry, CA 91745

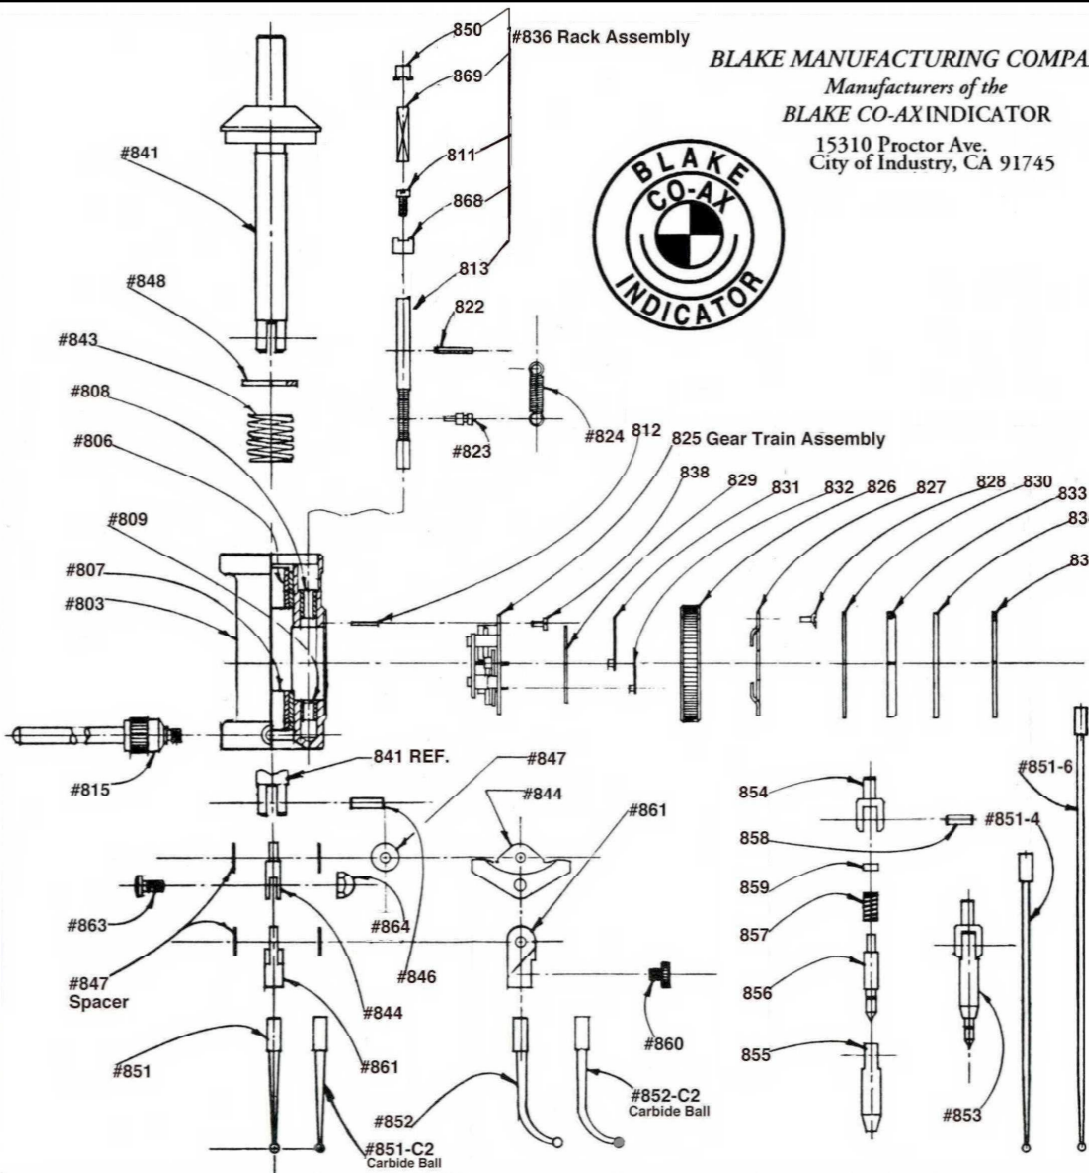

- 803 Assembly, Body Bushed
- 806 Upper Bushing
- 807 Lower Bushing
- 808 Upper Rack Bushing
- 809 Lower Rack Bushing
- 811 Rack Assembly Screw
- 812 Rack Spring Retaining Pin
- 813 Rack Gear, 1.953 NOM. Long
- 815 Restraining Arm
- 822 Rack Guide Pin
- 823 Rack Spring Post
- 824 Rack Return Spring
- 825 Gear Train Assembly
- 826 Bezel
- 827 Bezel Retaining Spring
- 828 Bezel Retaining Screw (4 required)
- 829 Inside Dial (small)
- 830 Outside Dial (large)
- 831 Large Hand
- 832 Small Hand
- 833 Crystal Spacing Ring
- 834 Crystal
- 835 Crystal Retaining Ring
- 836 Rack Gear Assembly
- 837 Movement Assembly, Installed
- 838 Movement Retaining Screw
- 841 Standard Shaft
- 843 Shaft Retaining Spring
- 844 Finished Machined Rocker
- 846 Rocker Pivot Pin
- 847-.002 Spacer, .002 Thick
- 847-.003 Spacer, .003 Thick
- 847-.004 Spacer, .004 Thick
- 848 Shaft Thrust Washer
- 850 Rack Assembly Cap
- 851 Feeler, Inside Max Dia. 4.250"
- 851-C2 Feeler, Inside Carbide Ball Max. Dia. 4.250"
- 851-4 Feeler, Inside Max. Dia. 8.0"
- 851-6 Feeler, Inside Max. Dia. 12.0"
- 852 Feeler, Outside Max. Dia. 4.250"
- 852-C2 Feeler, Outside Carbide Ball Max. Dia. 4.250"
- 853 Center Point Feeler
- 854 Center Point Feeler Hinge
- 855 Center Point Feeler Body
- 856 Center Point Feeler Point
- 857 Center Point Feeler Spring
- 858 Center Point Feeler Pin
- 859 Center Point Feeler Plug
- 860 Feeler Retaining Screw
- 861 Feeler Pivot Bracket
- 862 Bracket Assembly
- 863 Bracket Pivot Screw
- 864 Bracket Pivot Nut
- 868 Rack Assembly Cup
- 869 Rack Assembly Spring

CAUTION!
Any engraving, etching or stamping on the main body housing will void warranty and can seriously impair indicator operation.